 



Connecting to ACU UI top terminals:  
 - max. wire cross section: 0.75mm<sup>2</sup>  
 - take out ACU power supply,  
 - insert wires into terminals,  
 - install power supply.

Disconnecting from top terminals:  
 - gently push the terminal down with  
 a small flat screwdriver,  
 - remove wire.



ACU inputs L, N:  
 100-240 V AC  
 0.45 A, avg. 2 W.

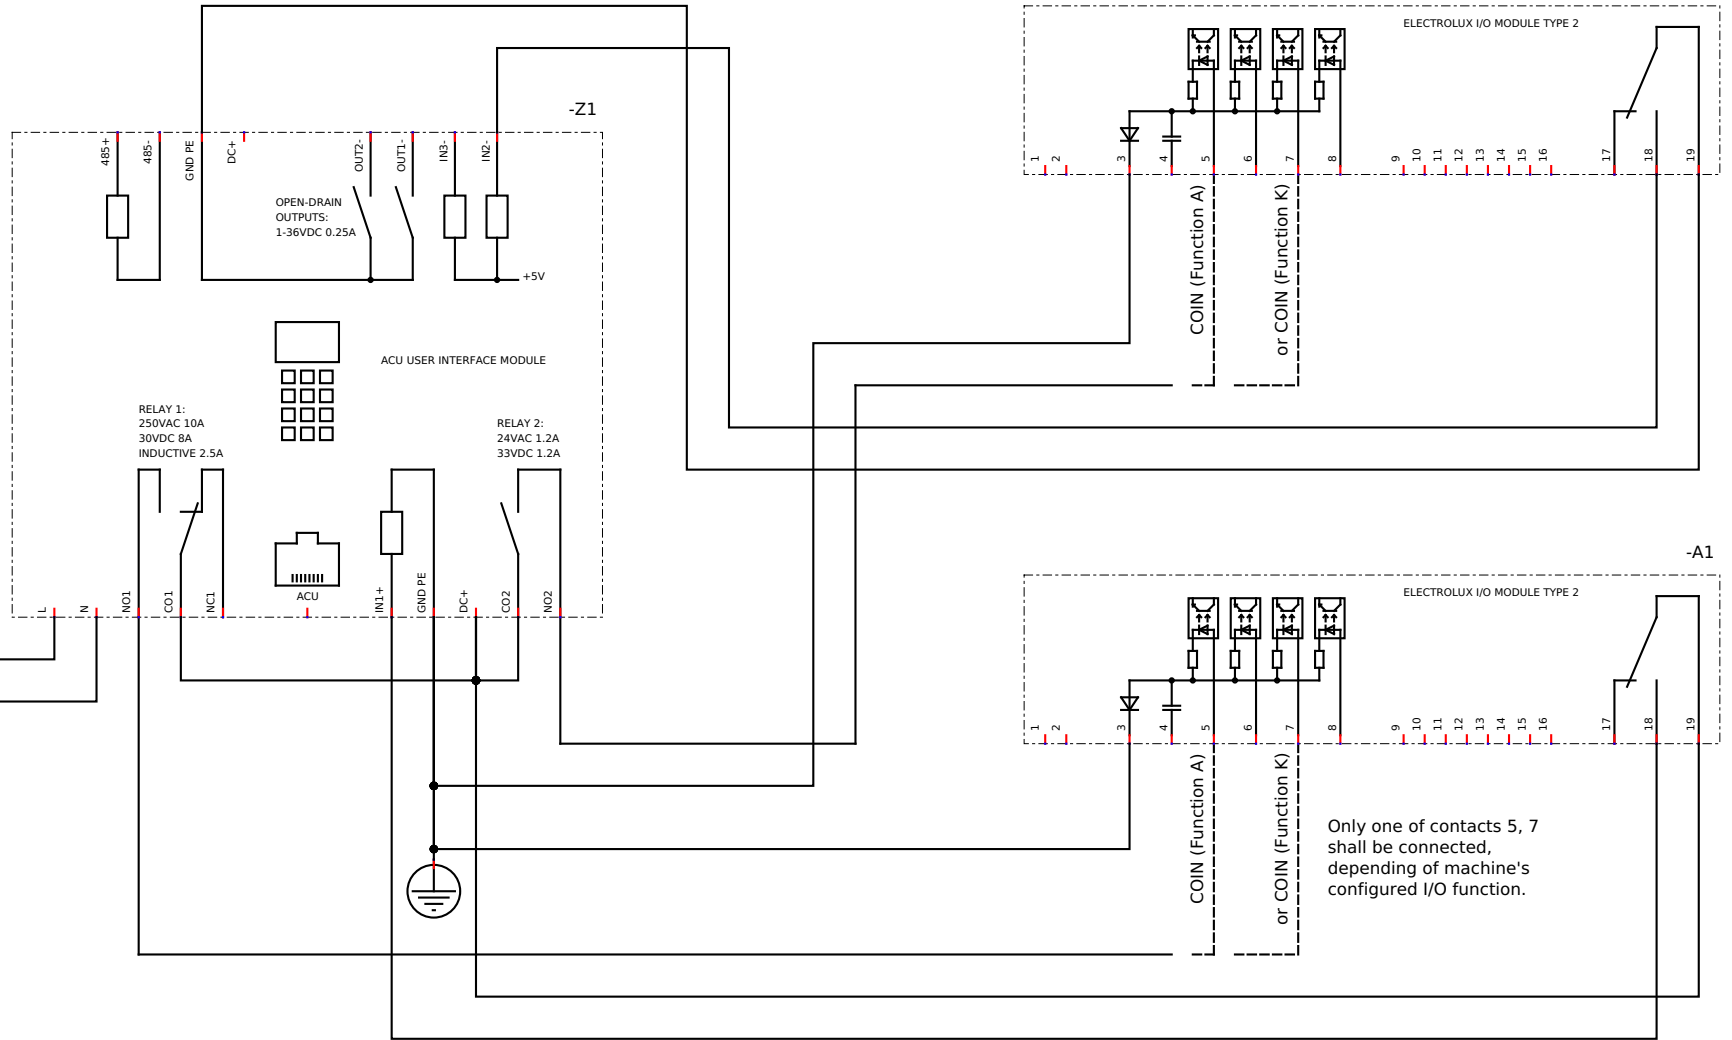

If the machine is configured with a START input, not a COIN input, then use chart W12 instead.  
 ACU sends a 24 V DC pulse to open the machine for an initial time period.  
 Subsequent pulses shall add extra time to the machine.  
 User's payment is depleted immediately after every pulse has been sent.  
 Feedback signal at line 18 shall remain active (high) during the entire program.