



To open the barrier, ACU sends a pulse shorting terminals CO2 and NO2.  
 Feedback signal from the barrier shall remain active (high) while the barrier is open.  
 Feedback signal must be connected to IN1+ as shown, in order to deplete user's payment.  
 If feedback signal is not available, use chart B2.

Gate barrier controller.  
 Example model:  
 Magnetic Autocontrol MHTM MicroDrive.